
USER'S MANUAL



Shutdown:Press the power key then pop-up options will be on the desktop, choose the option of Power off as shown below.

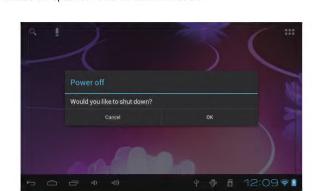

Click OK to shutdown

Sleep:In the normal state operation of the machine, press the power button, enter a state of dormancy, at this time, the screen will be closed. Another short press on the power button will resume to normal mode. When CyberPad is not in use you can start this function to reduce power consumption.

3.Desktop

After the normal startup of the system is completed, you can see the Android 4.0 desktop(below). The default desktop is consisted of quick search bar, status bar.and menu label icon.



iVIEW's new 9" CyberPad 900 TPC Tablet PC is the next generation of

mobile internet device, providing access to the web, customization

through Android Apps, and viewing of multimedia content. You are able

to access easily and download thousands of Apps from the Android Play

Store and the King Kong Apps Market to tap your need, such as news,

weather, or local business info, enjoying your favorite movie clips,

watching some YouTube videos, playing games, or just kicking back and

listening to some music, working on the get-go with Office productivity

software. With built-in DDR3 of 512MB, 9" CyberPad speed is faster than

most of the tablet pc in the market and with memory of 8GB, you may

store plenty of pictures, movies, and documents. Expansion storage is

available via Card Reader slot, up to 32GB. iVIEW- 900 TPC is your all-

* This is a high-density electronic product; please do not dismantle it by yourself.

humidity, dusty, with strong magnetic and long-term exposure to the sun.

* Avoid using this product in the following environments: High and low temperature,

* Wipe the product shell by using dry wet cotton cloth gently; the use of other

and water splash, so cups filled with liquids should not be placed near the product.

* Do not use headphones when going across a road, driving a motorcycle or bicycle,

* Please use permitted battery, charger and accessories only, the use of any other type

* Please deal with waste machinery and accessories according to local environmental

* If you have any questions in the process of using of the product, please contact the

* For the smeared memory loss that is caused by product damage, repair or other

causes of product damage, repair, the company is not responsible for it, so please

of product would be a breach of warranty regulations, and may be dangerous.

local dealer or contact Wiltronics customer service center directly.

* Use the headset long time, high volume may cause permanent damage to hearing.

chemical cleaning is prohibited. This product should keep away from water drop

i -one tablet that you can't live without.

* Avoid strong beat and collision

in order to avoid traffic accidents.

follow the user's guide and timely backup.

The status bar is used to display the network status of current system,battery power,time and other information.

Kevs used in Android systems process: The volume keys: Volume+, Volume- in the taskbar can be used for Volume change. The power button:Press long time for switching machine. Press quickly to enter or leave the state of dormancy.

Quick search box is used by the typing keywords to do the Internet search. The main menu tag is in the right middle side of the screen, click it and the default menu bar can be expanded.

4.Buttons

Menu key: Return or select the main interface. Return key :Return to the last interface .

Click on the main menu interface in the "Settings" icon,and then open the system settings interface, as shown below:

WIRELESS & NETWORKS	
♥ Wi-Fi OFF	
O Data usage	
More	
DEVICE	
- N Sound	
Display	
■ Storage	
	# 4:20

5.Main menu operation

Press the main menu tag on the main menu, as shown below:

Content

1.Appearance and button..

2.Start-up and shut-down..

Main menu operation...

* Time/Date setting..

* Screen standby...

* Backup & reset...

* Storage

* File Manager.

7 Music playback.

8 Video playback..

9 Photo browse...

12 Photograph...

14 External device.

10 Wallpaper .

11 Record

13 E-mail

Features...

6 Network....

* Wireless& network.....

* Language & keyboard..

* Install, unload,run the application...

system settings.

* Brightness...

3.Desktop..

4.Buttons.....

browse webpage, play game and other operations System settings

In the main menu, you can set the system, operate the existed application, install a new application, and start touch calibration, play music and video,

WIRELESS & NETWORKS	
❤ Wi-Fi OFF	
O Data usage	
More	
DEVICE	
♦ Sound	
Display	
■ Storage	

Select the relevant items to do corresponding operation, for example: * Wireless&network * Sound&Display * Date&Time * The equipment and so on • Time/Date setting: In the interface of the setting, select "the time and date settings" to enter the date and time settings interface:

1. Appearance and button

9" Capacitive touch panel: In The Operation, to click, dragging on the touch panel

startup: Long Press and hold the power button, the system will enter the

second to shutdown, The system can hint "power off" option, Clike"ok". you

can safely shut down.startup: Long Press and hold the power button, the

shutdown; In the main menu interface, Press the power button about 5

1.1 Touch panel


1.2 POWER

main interface.

system will enter the main interface.

format,set date and other information

You can choose the automatic mode by using the network time . You also can choose to set the date ,select time zone,set time, select date For example, choose the set date ,as shown below:

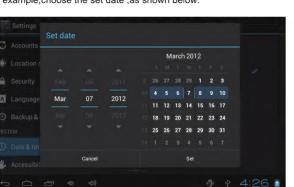

Choose+: It means increase of 1 unit; Select-: It means it reduces 1 unit; You can also choose the number to enter the input pattern. Directly input the number and the n select the button done as shown below:

March 2012 18 19 20 21 22 23 24 25 26 27 28 29 30 31

Lock screen: Short press Power button to lock screen or unlock screen.

Remark:1.When power is empty, system will shut down automatically.

may take longer time to enter into system.

1.3 ESC

will return the main interface.

1.4 Volume +, Volume-

3.5 mm standard earphone jack.

Card Reader solt: external T-FLASH card.

charging and external connection USB flash drive.

short press RESET button, Tablet will force to shutdown.

1.5 Earphone jack

1.6 Card Reader

2.Illegal turn off the device, restart will scan and restore the disk, it

Short Press ESC button will return the last interface, long Press ESC button

The buttons on top Volume +, Volume-achieve changes in the volume.

USB jack: you can use it to connect the computer for data transmission,

When the Tablet under the condition of the crash, use the small objects to

【Remark】: unless unable to shutdown, otherwise don't use the reset,

suggest you to shutdown by normal, if no will easy to damage the machine

Select"done", if the input number is legitimate, then the operation is successful, and the system will use the new settings.

Brightness:

In the setting of the interface to select "display settings" into the display settings interface,roll drop-down lists to select "Brightness" as appeared in



Screen standby:

in the following interface.

2. Start-up and shut-down:

Startup Logo,in the process of startup


Then the system enters the default home interface.

Start-up, as shown below:

Startup: To press the power key and the system will enter the process of

Screen standby: You can set the time for the screen standby function to occur. After it starts it will lock the screen the screen saver appears. In the setting of the interface to select "display settings"into the display settings interface,roll drop-down lists to select"screen standby: as appeared

Note: During video playback, the screen standby function is automatically

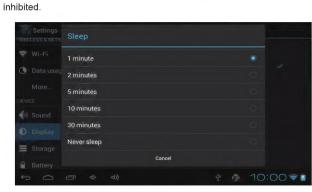

Wireless& network: Click on the "Settings"icon in the main menu, click on the "wireless and

network"into the "wireless and network"settings. Click on the "WIFI" column and WIFI function can be started at once.Click"WIFI settings" column can enter "WIFI setting interface", as shown below:



In the WIFI" interface(Pictured above), by click on the WIFI column you can open and close the WIFI function. Click "network notification" to list the wireless router that is searched by Cyberpad .Click the searched wireless router and setup window will pop-up. follow the prompts to complete the WIFI network links.



After you connected WI-FI as shown above, the following image will appear:


 Install, unload, run the application *Android installation: There are a variety of ways to install applications, for example, you can click on the Apk file directly and it will automatically be installed. in case that it is the third party programs installation the system may identify it as unsafe and will need the following procedures for installation with the assistance of the Appinstaller.

Enter the menu and select Settings-Application

More	DOWNLOADED ON SD CARD RUNNING ALL
(ii) Sound	Adobe Flash Player 11,1
Display	Angry Birds
Storage	AnTuTu Benchmark
□ Battery	3.21MB
Apps	Fruit Ninja Free 22.67MB
PERSONAL	internal storage
Accounts & sync	160MB used B47MB free
	4) 4:22

How to uninstall?

"setting">"Application">"Manage application" And then there will be installed the program list. 2. Click you want to uninstall icons, will enter the following interface. 3. Click Uninstall, then you can felete the application.

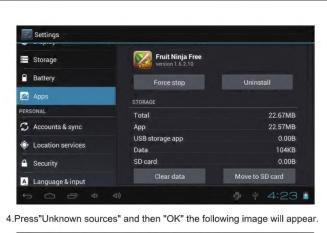

Storage	PASSWORDS	
≘ Battery	Make passwords visible	
Apps	DEVICE ADMINISTRATION	
PERSONAL	Device administrators View or deactivate device administrators	
Accounts & sync	Unknown sources Allow installation of non-Market apps	
 Location services 	CREDENTIAL STORAGE	
☐ Security	Trusted credentials	
A Language & input	Display trusted CA certificates	
		4:24

 Backup & reset Factory data reset



on SD	Enable media scanning on SD	More
on USB	Enable media scanning on USB	Sound
	INTERNAL STORAGE	Display
		Storage
	Total space	Battery
	0.9868	Apps
	Apps	Apps

【Remark】: pls touch option"delete SD card", so that can safety to romeve

Language & keyboard



Select Language: 54 kind of national languages are available. Remark: Android system can support 54 kind of language, now manu interface just suport 14 language. Android keyboard: Android keyboard setting Sound on Key-press Auto-capitalisation

Auto-complete: Specebar and punctuation automatically insert highlig.

 File Manager Copy the APK software program that will be installed to Micro SD card or


Show suggestions: Display suggested words while typing

The first time to enter the program installation, the system defaults NAND Flash as the search directory

If your APK setup application is on Micro SD card. The system will automatically search the directory from Micro SD Card .

🜵 🚨 🚷 🏅 🗅

Install the searched application

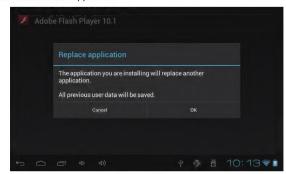

The user can do on-line installation through "market", or download and install by the computer,or through a built-in browser download and install


*Uninstall the application: You can use the third party software management tools or use the built-in Android application management software. Select"Settings"/"application"/"management application", and select the corresponding installed applications to check the program.

6.Network Webpage browsing:

When the network is connected ,open the webpage browser and enter the URL, you can browse.





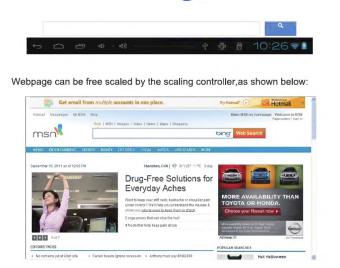


Online video: Users can use the "market"or other ways to download online video player


software, online TV player software, online music software, and then install in the machine. To open the installed software, you can watch online video or online TV, and listen to online radio.

7.Music playback

Click on the "music"icon in the main menu, and then enter the music player interface.

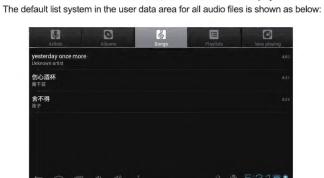

You can use synchronous USB to input audio file, or by inserting a Mirco SD card with audio file to input audio files. You can also use the network to download the audio file. Select the corresponding tag, and check the interface as "artists", "album", and "song" and so on to play the song.

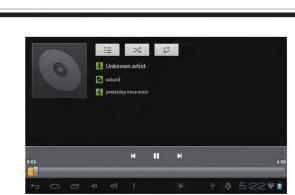

8. Video playback:


Click on the "Video player" in the main menu,to enter the "Super-HD player" main interface. It lists all video files and image files as shown below:

Select the video file and enter the video playing interface, as shown below. Select "play", "stop", "fast forward", "rewind", "progress" and other control keys to control the payback schedule.



NAND FLASH.

9. Photo browse Click on the main menu"Super-HD player"to enter the "Super-HD player"

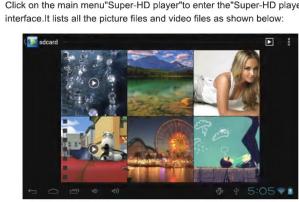

Select a picture file; enter the picture play interface, as shown below. Select"zoom","narrow" "set" and "delete" operation.



10. Photo browse

The system supports static wallpaper, and 3D wallpaper. In the desktop interface, press down the Menu key for pop-up menu options,



There are the following options: Select "wallpaper" to customize wallpaper.

14. External device

Select the "dynamic wallpaper"to use the system-supplied 3D wallpaper. Select the "Gallery" to choose a picture supplied by the system as the static wallpaper Or press on the screen and dialog box for the following to pop:



Into the above dialog box, click on the "wallpaper"set; The following options will display: Select"wallpaper"to customize wallpaper. Select the "dynamic wallpaper"to use the system-supplied 3D wallpaper. Select the "Gallery" to choose a picture supplied by the system as the

static wallpaper. 11. Record

Click on the "sound recorder" icon in the main menu and enter the "sound recorder" main interface as shown below:



Select the "recording" button to record and after recording is completed press"stop" button . At this time you can select the "play" button to play the recorded sound. Select"Use this recording"button to save the recording, so that you can find the corresponding audio files in "NAND"; if you do not need to save ,you can select the "give up" button.

12. Photograph

Cosmetic damage.

Click on the "camera" icon in the main menu and enter the "camera" main interface as shown below:




Click on shutter in the camera



13. E-mail

Click on the "e-mail" icon in the main menu to enter email client . Allocation of account information will be required the first time. As shown below:

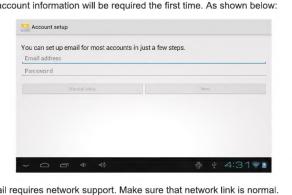

Email requires network support. Make sure that network link is normal. Here we take whhpwjh@126.com as an example:

In the email address bar, enter your valid email address: whhpwjh@126.com In the email address bar, enter your valid password:****** Then you can choose the "next", account type selection interface will appear as shown below:



shown

Account setup	
Jsername	
awillian@126.com	
Password	

PDP3 server	
pop3.126.com	
Port	
110	
Security type	
None	4
Delete email from server	
Never	4

Please according to each email provider's information to set different

The POP3 server:Default is "126.com",and should be modified as "pop.126.com"

The port number is "110" Then select the "next", you will enter the "inspection acceptance server settings", if set up correctly ,there will be a "foreign server settings" interface as follows:



In the column"name",input the name you want to display in the outgoing message, and then click "finish" button, you can enter the mail interface. It will load the mail automatically:

Select one of the column to be viewed in the message. You can do "Reply", "delete", "more reply" and other operations at the view bar.



USB connection Enter setting">"Developer options">"Choose USB work pattern: OTG/HOST/SLAVE..

Using USB to connect the Cyberpad and PC, the default connection mode is a synchronous mode. You can drag the status bar to drop, appeared as the following interface: Click into the USB connection hints.



"USB connected": It means that the external memory(SD) loading is completed, and you can see the corresponding letter in the PC terminal.

OTG use

CyberPad supports FAT32 format mobile devices such as U disk and The plug-and-play connection method: Use the OTG wire to connect the Tablet PC USB OTG and the external

CyberPad supports plug and play USB mouse and keyboard device.

equipment. Keyboard and mouse

Features

* Screen:9" Capacitive Touch Screen * Processor: 1.2Ghz * GPU:Mali 400MP

* OS: Android 4.0 Ice Cream Sandwich

* RAM:512MB DDR3 * Memory:8GB * Support 3G Module USB Dongle * Support Camera 0.3MP

* Support G-SENSOR * Support Flash 10.1 * Support Skype Video Call * I/O port :USB

* Card Slot:Micro SD Card(Max:32GB) * Audio Output:Stereo Speaker(8Ω1.0w)/3.5MM Stereo Headphone Jack * King Kong Apps Market, Internet Browser, Office, Calendar, Calculator, E-mail * Picture Viewing, Music/Video Playback, Games * Supports Multi Languages

* Battery: Built in 5000mAh/3.7V Li-ion, rechargeable

Basic Warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS (parts and labor) and one (1) YEAR (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at "No Charge". This limited warranty does not cover any loss or damages that occur as result of:

· Shipping or improper installation or maintenance. Neglect. · Any cause other than ordinary commercial or industrial application. Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered

 Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
 Accidents, acts of God. In the United States and Canada contact Customer Service at (909) 627 - 9888. * Please note that in order to have your merchandise repaired and replaced by

1. A sales receipt/proof of purchase indicating date of purchase 2. Your Name, Place of Purchase, Address, UnitModel, and Description of Problem. 3. Send the unit pre-paid to the address below in the original packaging or r ubstitute to prevent damage. No return will be shipped back to a PO BOX. 4. All of the accessories that came with the product package must be sent along with

warranty, you must contact our customer service representatives by phone or email, and get RMA number

To obtain factory service, the original purchaser MUST present the following:

 Please include your check or money order in the amount of \$20.00 to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from purchaser's failure to provide any or all of the necessary information. 6. There is Additional Shipping Charge for areas outside of United States. For



using this product. If you need further assistance please contact us at: (909) 627 - 9888 Additional troubleshooting information can also be found on the web at:

www.iviewus.com and click on "Support"

or email us at support@iviewus.com